BMW G42/G87 2 Series Carbon Fiber Wing
Installation Instructions



Proper service and repair procedures are vital to the safe, reliable operation of all motor vehicles as well as the personal safety of those performing the repairs. Standard safety procedures and precautions (including use of safety goggles and proper tools and equipment) should be followed at all times to eliminate the possibility of personal injury or improper service which could damage the vehicle or compromise its safety.

INSTALLATION NOTES

- **RH** refers to the ***passenger side*** of the vehicle.
- **LH** refers to the ***driver side*** of the vehicle.
- Always use the proper torque specifications.
- If applicable to this installation, torque specifications will be listed throughout the document and at the end as well.
- Please read all of these instructions and familiarize yourself with the complete process **BEFORE** you begin.

GENERAL PREPARATION AND SAFETY INFORMATION

Turner Motorsport cares about your health and safety, please read the following safety information. This information pertains to automotive service in general, and while it may not pertain to every job you do, please remember and share these important safety tips.

- Park your car in a safe, well lit, level area.
- Shut the engine off and remove the key from the ignition switch.
- Make sure any remote start devices are properly disabled.
- **ALWAYS** wear safety glasses.
- Make sure the parking brake is applied until the vehicle is safely lifted and supported.
- Whether lifting a vehicle using an automotive lift or a hydraulic jack, be sure and utilize the factory specified lift points.
- Lifting a vehicle in an incorrect location can cause damage to the suspension/running gear.
- **ALWAYS** support the vehicle with jack stands.
- **ALWAYS** read and follow all safety information and warnings for the equipment you are using.




NEVER get underneath a vehicle that is supported only by a jack, and ALWAYS make sure that the vehicle is securely supported on jack stands.

INSTALLING THE CARBON FIBER WING


Step 1: 4mm Hex (Allen) Wrench

Install the clamping bracket (highlighted in **GREEN**) onto the base on ***one side*** of the wing, then loosely thread in four of the M5 x 30mm screws (arrows).

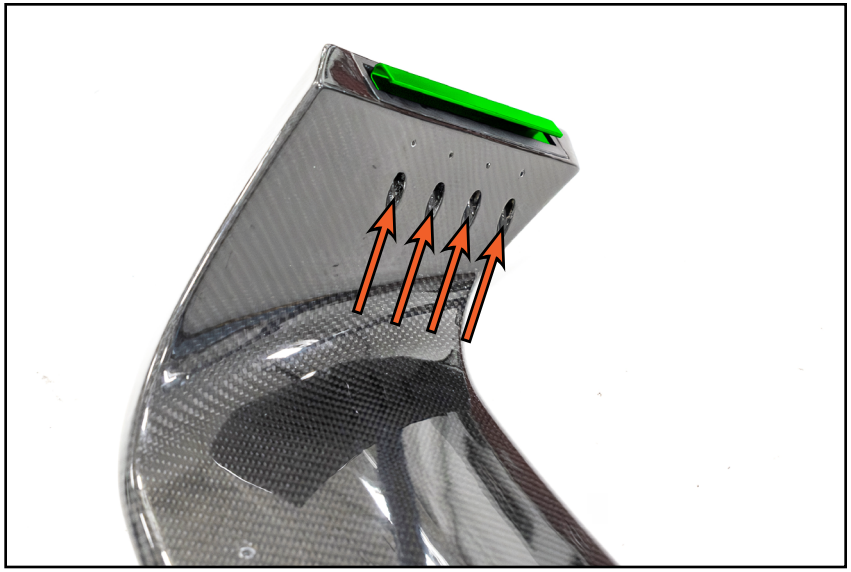

Step 2:

Apply the provided gasket to the area highlighted in **GREEN** on the base of the wing on ***both sides***.

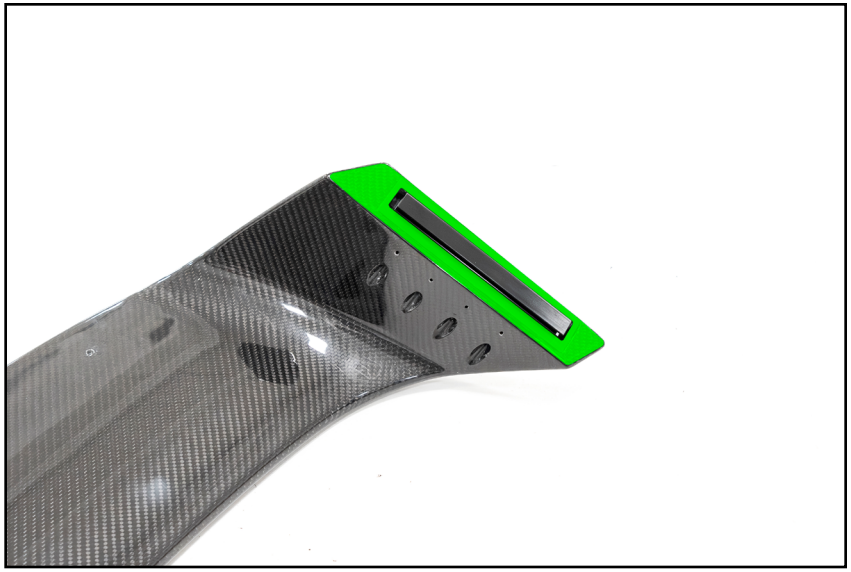

INSTALLING THE CARBON FIBER WING

Step 3:

Open the trunk and carefully hook the clamping bracket on the wing under the edge of the trunk lid as shown.



Step 4:

With the help of a second set of hands, carefully lower the other end of the wing into place on the trunk lid as shown and hold it in this position.



INSTALLING THE CARBON FIBER WING

Step 5: 4mm Hex (Allen) Wrench

Hook the second clamping bracket (highlighted in **GREEN**) over the edge of the trunk before loosely securing it to the wing using the remaining provided M5 x 30mm screws.



Step 6: 4mm Hex (Allen) Wrench


Carefully adjust the wing until you are satisfied with the fitment, then tighten the screws until fully snug.



INSTALLING THE CARBON FIBER WING


Step 7: 4mm Hex (Allen) Wrench

Optional: Install the gurney flap onto the underside of the wing and loosely secure it with the provided M6 x 10mm screws (arrows).

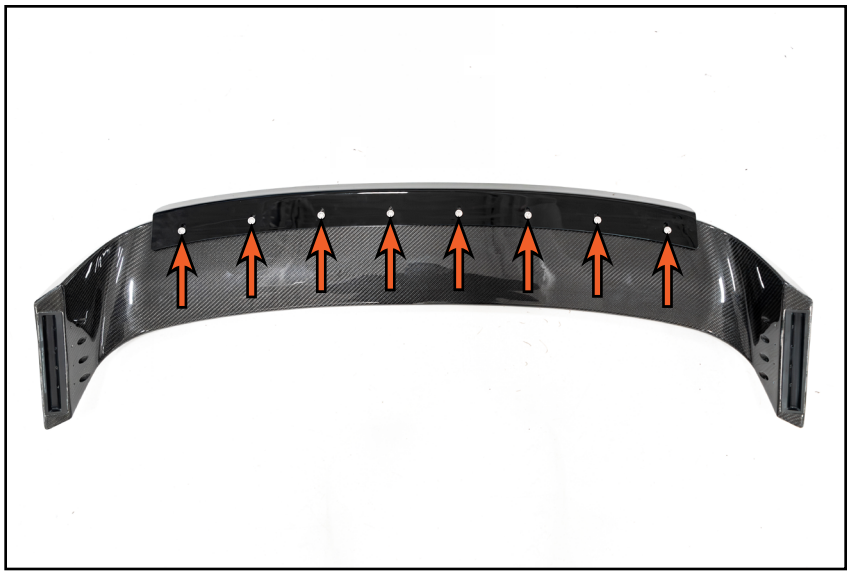


Step 8: 4mm Hex (Allen) Wrench

Optional: Slide the gurney flap (highlighted in **GREEN**) in or out to achieve your desired fitment, then tighten the screws until fully snug.

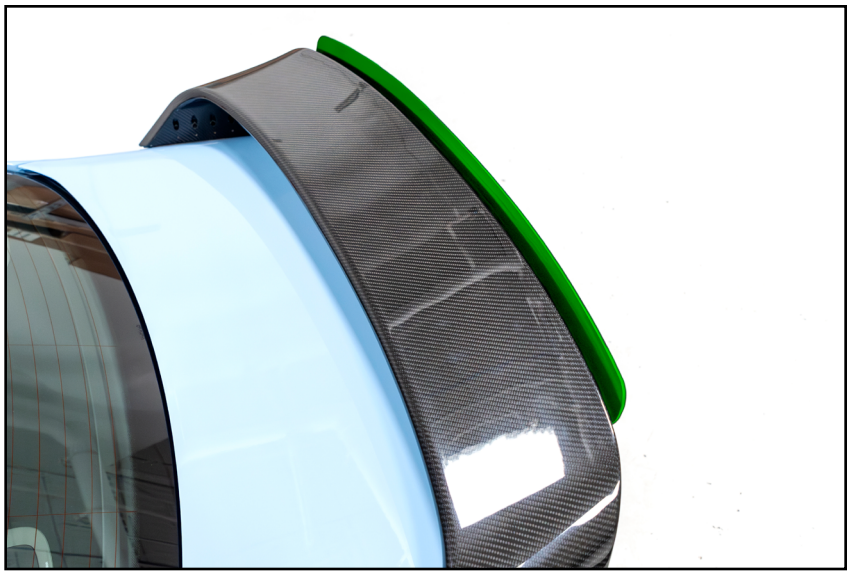

Your Carbon Fiber Wing installation is complete!

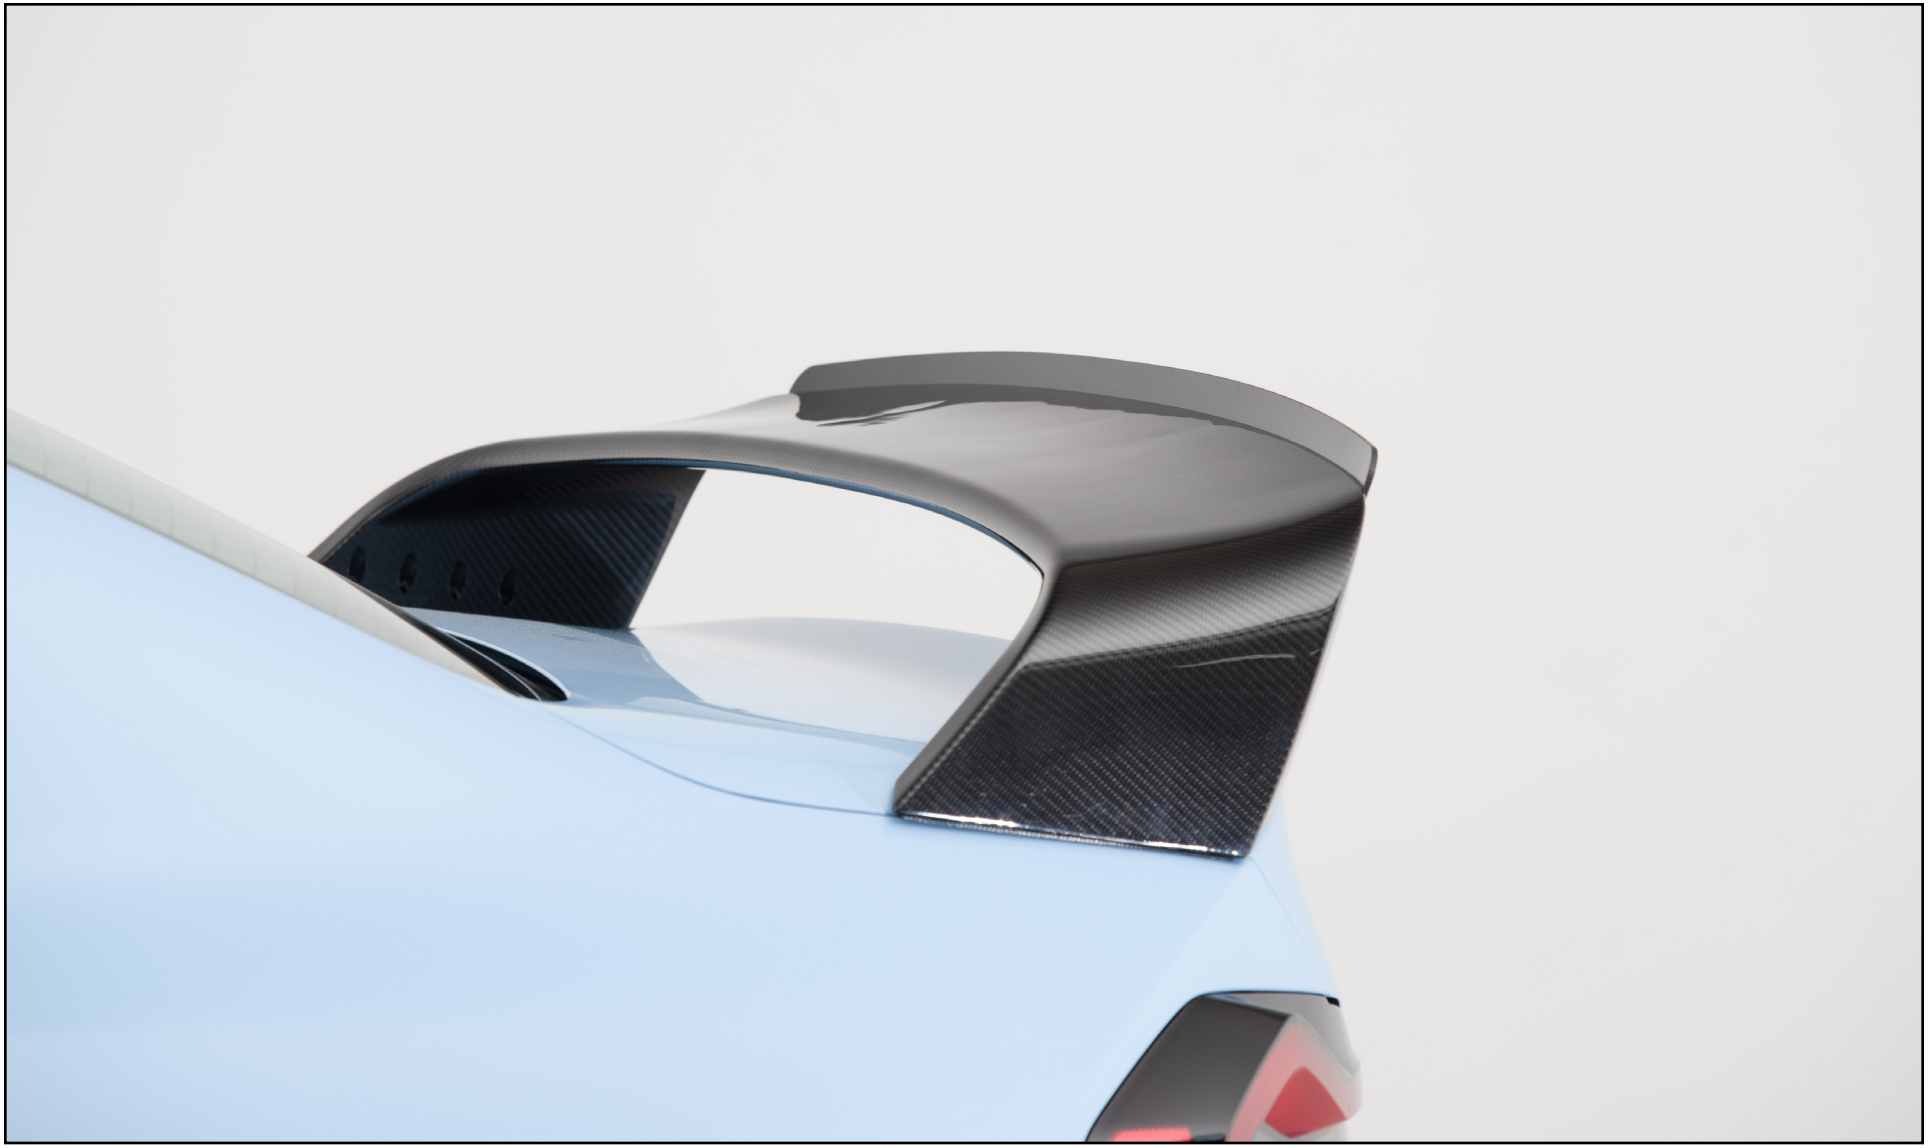

These instructions are provided as a courtesy by Turner Motorsport

Proper service and repair procedures are vital to the safe, reliable operation of all motor vehicles as well as the personal safety of those performing the repairs. Standard safety procedures and precautions (including use of safety goggles and proper tools and equipment) should be followed at all times to eliminate the possibility of personal injury or improper service which could damage the vehicle or compromise its safety.

Although this material has been prepared with the intent to provide reliable information, no warranty (express or implied) is made as to its accuracy or completeness. Neither is any liability assumed for loss or damage resulting from reliance on this material. SPECIFICALLY, NO WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR ANY OTHER WARRANTY IS MADE OR TO BE IMPLIED WITH RESPECT TO THIS MATERIAL. In no event will Turner Motorsport, Incorporated or its affiliates be liable for any damages, direct or indirect, consequential or compensatory, arising out of the use of this material.