Canadian Auto Performance

INSTALLATION GUIDE

CAP C8 Audi A6/S6 Pre-Preg Carbon Fiber Spoiler – V3



2-789 Arrow Rd,
Toronto, ON M9M 2L4, Canada

www.canautoperformance.com

This guide is for the installation of CAP's C8 Audi A6/S6 Pre-Preg Carbon Fiber Spoiler – V3. This spoiler needs to be installed by a professional or an experienced technician. Canadian Auto Performance is not responsible for any damage caused by incorrect installation.

ITEMS INCLUDED

- 1x – Pre-Preg C8 Audi A6/S6 V3 Spoiler
- 1x - 3M Tape



REQUIRED TOOLS:

- Fishing Line
- Heat Gun
- Rubber Adhesive Eraser Wheel
- Adhesion Remover
- Microfiber

STEP 1: Removal of Old Spoiler

Park your car on a level surface and apply the parking brake. If you have a spoiler attached to your vehicle, use a heat gun at moderate heat to your current spoiler to warm up the adhesive. This will make it easier to remove the spoiler from your trunk.

Afterwards, use a fishing line and slowly slide it underneath the spoiler to separate it from your trunk.

STEP 2: Cleaning Trunk of Vehicle

Using a rubber adhesive eraser wheel attached to your drill, gently run the wheel over the trunk to remove the adhesive residue as shown in Image 2.

Apply adhesive remover to remove any final trails of residue and wipe it down with a clean microfiber.



Image 2: Rubber adhesive eraser wheel

STEP 3: 3M Tape Attached to Spoiler

Attach the 3M Tape across the bottom of the spoiler and unravel a bit of the 3M tape as shown in Image 3.





Image 3: 3M Tape on Spoiler

STEP 4: Spoiler Aligned to Trunk

Fit the spoiler onto the vehicle and ensure both sides are even as shown in Image 4.

Once aligned, carefully peel off the 3M tape that was partially removed in Step 3, making sure to do this gradually along the entire length of the spoiler as shown in Image 5.



Image 4: Spoiler fit onto trunk

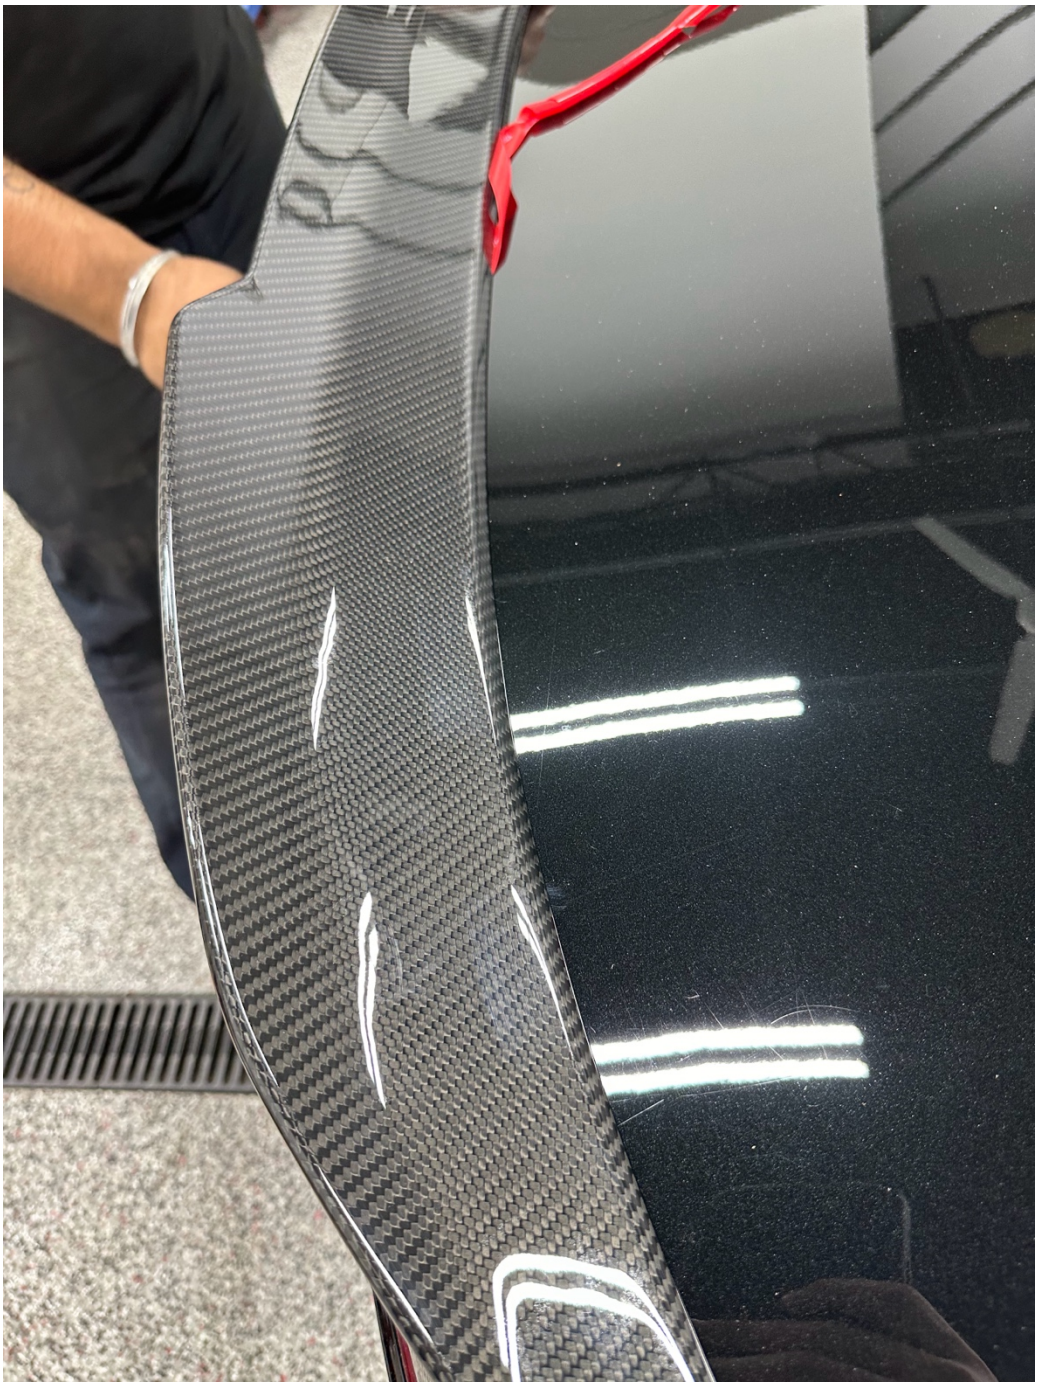


Image 5: 3M Tape unravelled to the middle of the spoiler

STEP 6: Spoiler Attachment to Trunk

Apply some pressure to the spoiler in the direction as shown by the red arrows in Image 6. This is to ensure the 3M Tape adheres onto the trunk properly.

Congratulations, your new spoiler has been installed!



Image 6: Spoiler mounted onto trunk

Thank You For Your Purchase

Thank you for purchasing from Canadian Auto Performance. We are dedicated to meet the needs of enthusiasts looking to modify their German vehicles with top tier quality parts. At Canadian Auto Performance, we take pride in our commitment to the highest of standards.

If you have any questions, please do not hesitate to contact us.

Canadian Auto Performance
2 - 789 Arrow Rd, Toronto, ON M9M 2L4, Canada

Calling from Canada: 416-613-9393
Calling from USA: 1-866-846-4288

www.canautoperformance.com

Canadian Auto Performance